



Intrusion Sensor

Removal

1. Remove the overhead console.
Refer to: [Overhead Console](#) (501-12 Instrument Panel and Console, Removal and Installation).
2.
 1. Remove the screws.
 2. Disconnect the electrical connector and remove the bracket and sensor assembly.

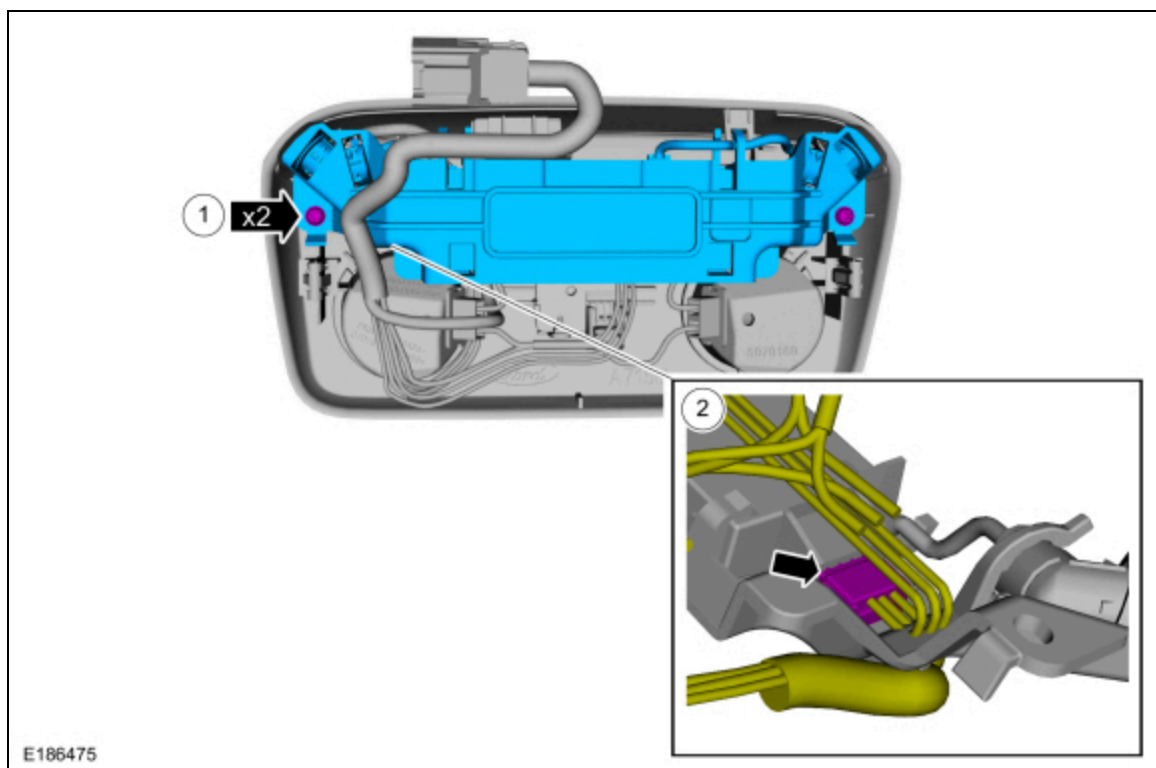

3.
 1. Release the clips and position the sensors aside.
 2. Release the clips.
 3. Remove the intrusion sensor.

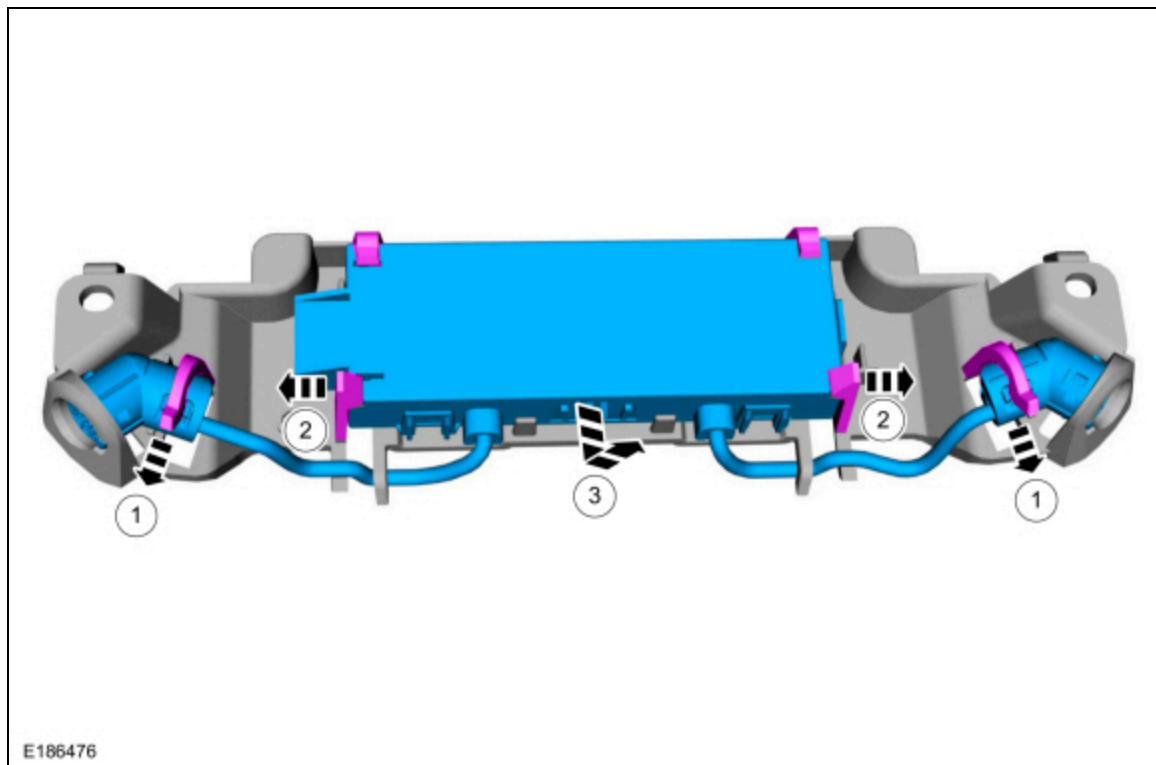

Installation

1. To install, reverse the removal procedure.

2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, carry out the LIN New Module Initialization procedure (Toolbox>Electrical>Service Functions>LIN New Module Initialization).

3. **NOTE:** *This step is only necessary when installing a new component.*

Carry out the BCM self-test. Clear the Diagnostic Trouble Codes (DTCs) and then retrieve the Diagnostic Trouble Codes (DTCs) from the BCM to confirm all Diagnostic Trouble Codes (DTCs) have been cleared.

© Copyright 2025, Ford Motor Company.