


Connector:	Description	Color	Harness	Base Part #	Service Pigtail
C2402A	FRONT CONTROLS INTERFACE MODULE (FCIM)		14401	#N/A	Not Available

Check for Terminal Part Numbers

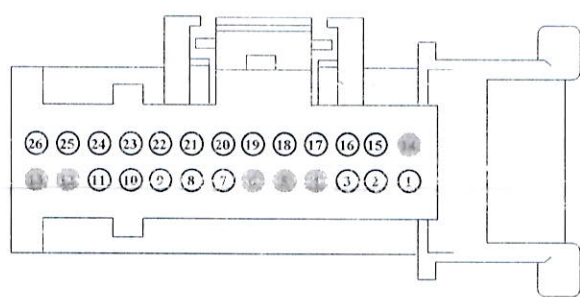


Pin	Circuit	Gauge	Circuit Function	Qualifier
1	GD216 (BK-VT)	20	GROUND - INSTRUMENT PANEL STRUCTURE # 3RD POINT	Ford China
1	GD216 (BK-GY)	20	GROUND - INSTRUMENT PANEL STRUCTURE # 3RD POINT	
2	RH111 (GY)	22	CTRL MOD. - CLIMATE # DOOR POSITION SENSORS ALSO GENERIC VREF RETURN IN LOGICAL SCHEMATICS	Ford China
2	RH111 (GY)	26	CTRL MOD. - CLIMATE # DOOR POSITION SENSORS ALSO GENERIC VREF RETURN IN LOGICAL SCHEMATICS	
3	LH111 (BN-WH)	22	CTRL MOD. - CLIMATE # DOOR POSITION SENSORS ALSO GENERIC VREF IN LOGICAL SCHEMATICS	
3	LH111 (BN-WH)	26	CTRL MOD. - CLIMATE # DOOR POSITION SENSORS ALSO GENERIC VREF IN LOGICAL SCHEMATICS	Lincoln
4	*	*	Not Used	
5	*	*	Not Used	
6	*	*	Not Used	
7	CRD02 (BN-BU)	22	CTRL MOD. - RELAY HEATER REAR WINDOW	
8	CH239 (BU-WH)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. LEFT COIL 2 / OPEN (IF PLUS)	C2402B →13
8	CH239 (BU)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. LEFT COIL 2 / OPEN (IF PLUS)	Ford China
9	CH238 (YE)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. LEFT COIL 1 / CLOSE (IF PLUS)	→14
10	CH237 (VT-WH)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. LEFT COMMON	→18
11	CH123 (VT-GN)	22	CTRL MOD - BLOWER MOTOR RELAY	
12	*	*	Not Used	

Pin	Circuit	Gauge	Circuit Function	Qualifier
13	*	*	Not Used	
14	*	*	Not Used	
15	VH451 (WH-GN)	22	SENSOR - AIR QUALITY	
16	CH206 (YE-BU)	26	CTRL MOD. - CLIMATE # DOOR MOTOR RECIRC. COMMON	
17	VDB06 (OG)	26	CONNECTOR - DIAGNOSTIC # CAN BUS MEDIUM SPEED HIGH	Ford
17	VDB06 (GY-OG)	22	CONNECTOR - DIAGNOSTIC # CAN BUS MEDIUM SPEED HIGH	Ford China
17	VDB06 (GY)	26	CONNECTOR - DIAGNOSTIC # CAN BUS MEDIUM SPEED HIGH	Lincoln
18	VDB07 (VT)	26	CONNECTOR - DIAGNOSTIC # CAN BUS MEDIUM SPEED LOW	Ford
18	VDB07 (VT)	26	CONNECTOR - DIAGNOSTIC # CAN BUS MEDIUM SPEED LOW	Lincoln
19	VH406 (VT)	26	SENSOR - A/C EVAPORATOR TEMPERATURE (ACET)	
20	CH202 (BU-WH)	26	CTRL MOD. - CLIMATE # DOOR MOTOR PANEL/FLOOR COIL 1 / FLOOR (IF PLUS)	
21	CH203 (GN)	26	CTRL MOD. - CLIMATE # DOOR MOTOR PANEL/FLOOR COIL 2 / PANEL (IF PLUS)	
22	CH201 (BN)	26	CTRL MOD. - CLIMATE # DOOR MOTOR PANEL/FLOOR COMMON	
23	VH101 (WH)	26	CTRL MOD. - CLIMATE # BLOWER MOTOR CONTROL	
24	CH208 (GN-WH)	26	CTRL MOD. - CLIMATE # DOOR MOTOR RECIRC. COIL 2 / OPEN (IF PLUS)	
25	CH207 (BU-OG)	26	CTRL MOD. - CLIMATE # DOOR MOTOR RECIRC. COIL 1 / CLOSE (IF PLUS)	
26	SBP12 (GN-RD)	20	FUSE - 12 OR CIRCUIT BREAKER	

Connector:	Description	Color	Harness	Base Part #	Service Pigtail
C2402B	FRONT CONTROLS INTERFACE MODULE (FCIM)		14401	#N/A	Not Available

Check for Terminal Part Numbers

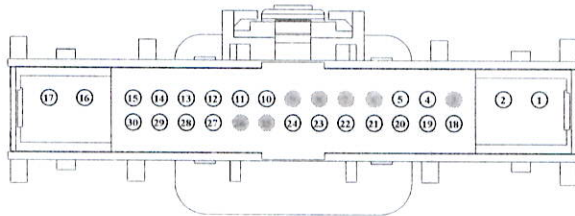

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	SBB65 (RD)	14	FUSE - 65 OR CIRCUIT BREAKER	
2	SBB65 (RD)	14	FUSE - 65 OR CIRCUIT BREAKER	
3	*	*	Not Used	
4	VH410 (GY)	26	SENSOR - DISCHARGE TEMP. # LEFT 2ND (LEFT FRONT FLOOR)	
5	VH409 (WH)	26	SENSOR - DISCHARGE TEMP. # LEFT (LEFT FRONT PANEL)	
6	*	*	Not Used	
7	*	*	Not Used	
8	*	*	Not Used	
9	*	*	Not Used	
10	VH412 (YE)	26	SENSOR - DISCHARGE TEMP. # RIGHT 2ND (RIGHT FRONT FLOOR)	
11	VH411 (VT)	26	SENSOR - DISCHARGE TEMP. # RIGHT (RIGHT FRONT PANEL)	
12	CRD22 (WH-BN)	22	CTRL MOD. - RELAY HEATER FRONT WINDOW RIGHT	
13	CH212 (BU-OG)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. RIGHT COIL 1 / CLOSE (IF PLUS)	
14	CH213 (BN)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. RIGHT COIL 2 / OPEN (IF PLUS)	8 ←
14	CH213 (BN-WH)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. RIGHT COIL 2 / OPEN (IF PLUS)	Ford China 9 ←
15	RHS10 (BU-OG)	20	CTRL MOD. - HOT/COLD SEAT # PASSENGER SENSOR CUSHION TEMP.	Lincoln
15	RHS10 (BU-OG)	22	CTRL MOD. - HOT/COLD SEAT # PASSENGER SENSOR CUSHION TEMP.	
16	CHS02 (YE-BU)	18	CTRL MOD. - HOT/COLD SEAT # DRIVER CUSHION HEATER +	
17	CHS07 (GY-BU)	18	CTRL MOD. - HOT/COLD SEAT # PASSENGER CUSHION HEATER +	
18	CH211 (YE)	26	CTRL MOD. - CLIMATE # DOOR MOTOR TEMP. RIGHT COMMON	10 ←

Pin	Circuit	Gauge	Circuit Function	Qualifier
19	VH413 (WH)	26	SENSOR - HUMIDITY	
20	CLS32 (BN-YE)	26	SWITCH - HAZARD	
21	VH416 (VT)	26	SENSOR - SUN LOAD # LEFT	
22	VH417 (YE)	26	SENSOR - SUN LOAD # RIGHT	
23	CH253 (WH)	26	CTRL MOD. - CLIMATE # START/STOP SWITCH DISABLE	Ford China
23	CH253 (WH)	22	CTRL MOD. - CLIMATE # START/STOP SWITCH DISABLE	
24	CE469 (BN)	26	CTRL MOD. - POWERTRAIN # START/STOP ENABLE/DISABLE SWITCH INDICATOR	
25	*	*	Not Used	
26	*	*	Not Used	
27	VHA31 (GN-BN)	22	SENSOR - REAR TEMP	
28	CRD21 (WH- BN)	22	CTRL MOD. - RELAY HEATER FRONT WINDOW LEFT	
29	VH414 (GN)	26	SENSOR - INCAR TEMP.	
30	RHS05 (YE-VT)	20	CTRL MOD. - HOT/COLD SEAT # DRIVER SENSOR CUSHION TEMP.	
30	RHS05 (YE-VT)	22	CTRL MOD. - HOT/COLD SEAT # DRIVER SENSOR CUSHION TEMP.	Ford China